


Flexible connector

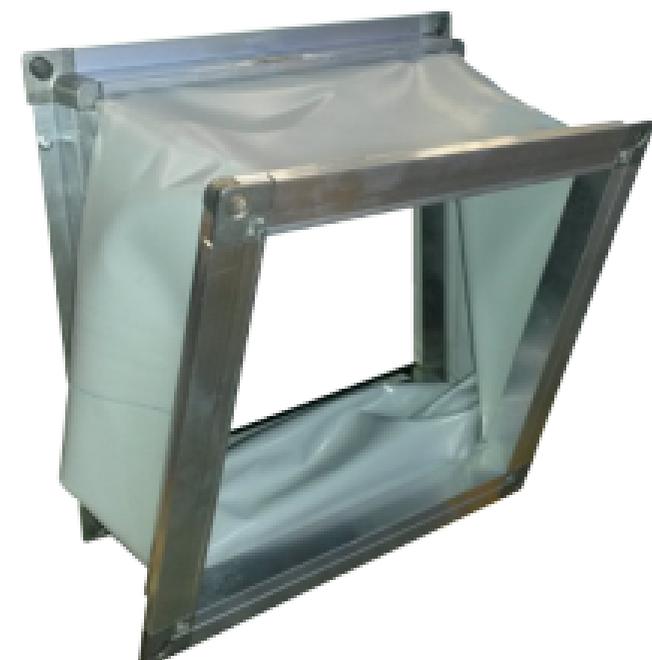

- Allows the flexible connection between the basic unit or its possible external sections and the air ducts.
- Cuts off the transmission of the vibrations to the ducts.
- Dimensions are the same of the corresponding SKR1/SKR2.