



1

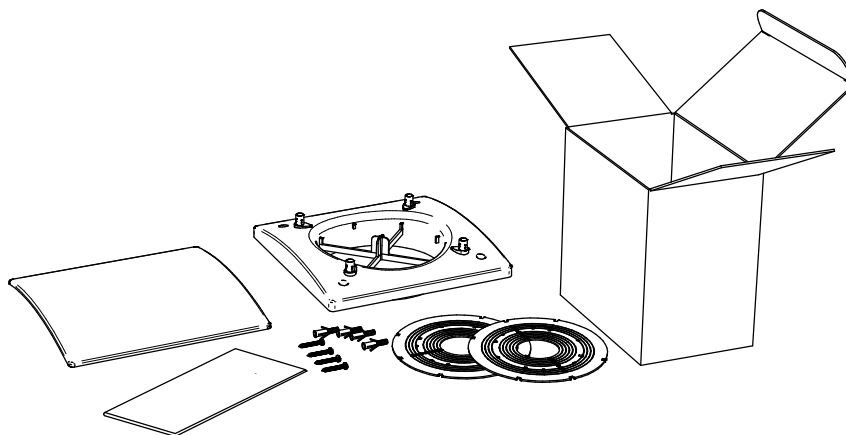


2

Ø125mm
Ø150mm


Ø80mm
Ø100mm

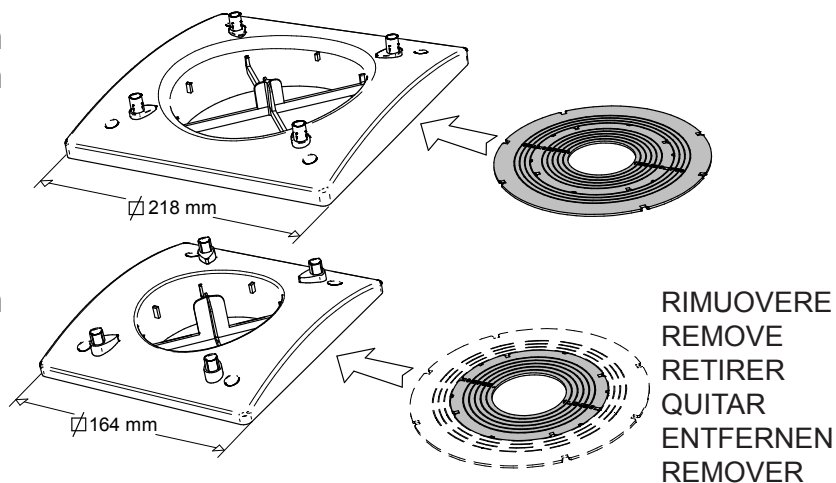


3

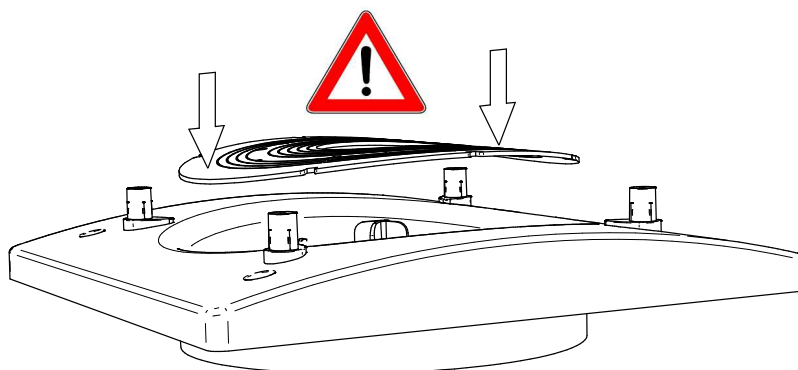

4

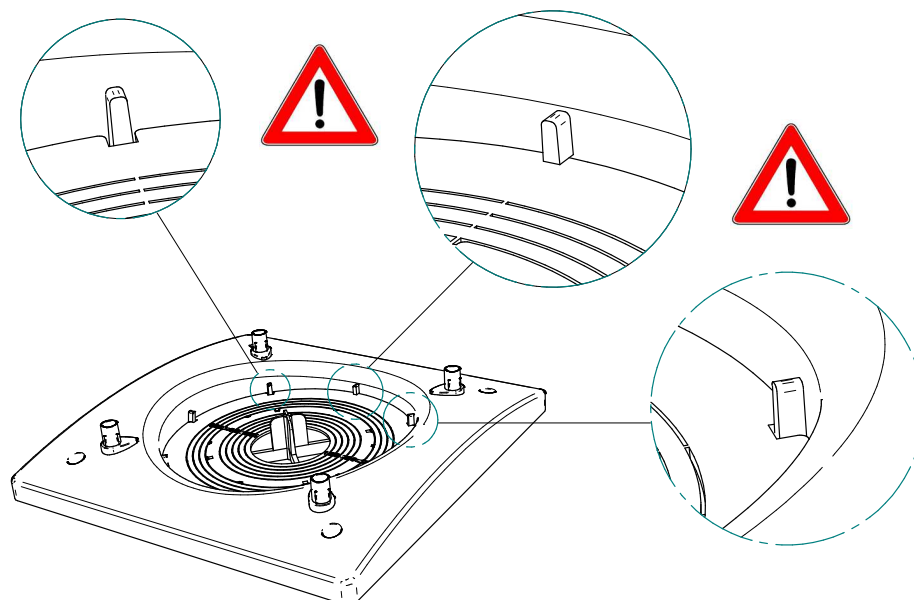

5

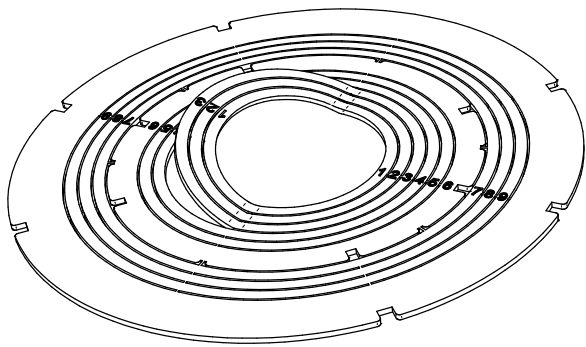

RIMUOVERE GLI ANELLI PER SETTARE IL FLUSSO DELL'ARIA
 REMOVE RINGS TO SET AIRFLOW
 RETIRER LES ANNEAUX POUR AMORCER LE FLUX DE L'AIR
 RETIRE LOS ANILLOS PARA INICIAR EL FLUJO DE AIRE
 WEGRÄUMEN SIE DEN RING UM DEN LUFTSTROM ZU
 REGULIEREN
 REMOVA OS ANÉIS PARA AJUSTAR O FLUXO DE AR

CURVE DI PRESTAZIONE: IL NUMERO INDICA L'ANELLO RIMASTO SUL REGOLATORE
 PERFORMANCE CURVES: THE NUMBER REFERS TO THE RING LEFT ON THE SETTING DEVICE
 COURBES DE CHARGE : LE NUMÉRO INDIQUE L'ANNEAU RESTANT SUR LE REGULATEUR
 CURVAS DE RENDIMIENTO: EL NÚMERO INDICA EL ANILLO RESTANTE EN EL REGULADOR
 LEISTUNGSKURVEN: DIE NUMMER ZEIGT DEN RING, DER AN DEM REGLER GEBLIEBEN IST
 CURVAS DE DESEMPENHO: O NÚMERO INDICA O ANEL DEIXADO NO REGULADOR

